

User Manual



Magnetic Speaker

Power Output: 10W

Audio Format: MP3

Audio Socket: ϕ 3.5mm Stereo Jack

Frequency: 40Hz ~ 20KHz

Power: Lithium Battery / USB Power

Voltage: 5V DC, 1A


Size: 56m(dia.) x 72.5mm(H)

Weight: 280g

Color: Black, White, Red


When works with other players.

Connect the mini USB cable to the speaker and the 3.5mm audio cable to audio source, such as PC, Laptop, MP3 Player, Mobile Phone, etc. Turn the switch to "Speaker". If the speaker is not played, please turn the switch to "OFF".


 Volume control can be from the audio source and the speaker.

Power & Charge

When the LED becomes red and the sound is weak, it means you need to recharge the battery, please turn the switch to "OFF", then connect the USB cable to PC, Laptop or USB Charger for charging till the LED becomes green.

-  1. USB charge voltage is DC 5V.
2. Don't play it while charging.

Connection Illustration

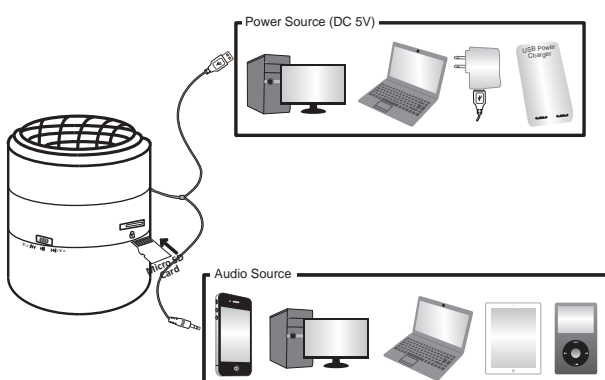

How to use?

1. Take off the protective film on the bottom of the speaker but not move the adhesive pad.




1. Please keep the protective film. Put it back if the speaker is not used.

2. The adhesive pad is washable and reusable.

2. Put the speaker onto a flat and suitable sound surface.

3. Lightly press the top side of the speaker for better connection between the adhesive pad and the surface.

4. Unlock the top part of the speaker to have better sound effect.

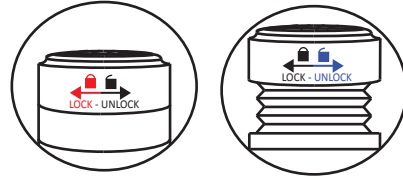

Function

When works with micro SD card.



Put micro SD card into the card slot, and turn the switch to "Micro SD", the LED will be green. Move to Volume +/- and hold to increase/reduce volume; move to $\blacktriangleright/\blacktriangleleft$ for next/back song; press $\blacktriangleright\blacktriangleright$ to play/pause. If the speaker is not played, please turn the switch to "OFF".

Precautions



1. It is prohibited to put the speaker onto vertical surface without extra support.
2. Do not modify, repair or dismantle this product.
3. It is normal if the speaker is slightly hot after prolonged use or high volume use.
4. Do not use this speaker in locations with high temperatures, high humidity levels, or direct sunlight.
5. Refrain from dropping the speaker and bumping it with other objects.
6. Do not insert foreign objects, such as pins, into the speaker which will cause damage.
7. Keep this speaker out of reach of children. Take note that this speaker should not be placed in your mouth.
8. Should any abnormal situations or problems occur while using the speaker, discontinue its use immediately.

